

# Modicon TM3

## Transmitter and Receiver Modules

### Hardware Guide

EIO0000003143.02  
06/2024



# Legal Information

The information provided in this document contains general descriptions, technical characteristics and/or recommendations related to products/solutions.

This document is not intended as a substitute for a detailed study or operational and site-specific development or schematic plan. It is not to be used for determining suitability or reliability of the products/solutions for specific user applications. It is the duty of any such user to perform or have any professional expert of its choice (integrator, specifier or the like) perform the appropriate and comprehensive risk analysis, evaluation and testing of the products/solutions with respect to the relevant specific application or use thereof.

The Schneider Electric brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this document are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owner.

This document and its content are protected under applicable copyright laws and provided for informative use only. No part of this document may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Schneider Electric does not grant any right or license for commercial use of the document or its content, except for a non-exclusive and personal license to consult it on an "as is" basis.

Schneider Electric reserves the right to make changes or updates with respect to or in the content of this document or the format thereof, at any time without notice.

**To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this document, as well as any non-intended use or misuse of the content thereof.**

# Table of Contents

Safety Information .....	5
Qualification of Personnel.....	5
Intended Use.....	6
About the Book.....	7
TM3 Transmitter and Receiver Modules General Overview .....	13
TM3 Transmitter and Receiver Modules Description .....	14
General Description .....	14
Physical Description.....	16
Accessories.....	18
TM3 Transmitter and Receiver Modules Installation .....	19
TM3 Transmitter and Receiver Modules General Rules for Implementing.....	19
Environmental Characteristics.....	19
Certifications and Standards .....	21
TM3 Transmitter and Receiver Modules Installation .....	22
Installation and Maintenance Requirements .....	22
Installation Guidelines .....	23
Top Hat Section Rail (DIN rail).....	25
Assembling a Module to a Controller or Receiver Module .....	27
Disassembling a Module from a Controller or Receiver Module .....	28
Direct Mounting on a Panel Surface.....	29
TM3 Transmitter and Receiver Modules Electrical Requirements.....	29
Wiring Best Practices .....	29
DC Power Supply Characteristics.....	32
Grounding the TM3 Transmitter and Receiver Modules .....	34
TM3 Transmitter and Receiver Modules .....	39
TM3XTRA1 Transmitter Module.....	40
TM3XTRA1 Presentation.....	40
TM3XTRA1 Characteristics .....	41
TM3XTRA1 Wiring Diagram .....	41
TM3XREC1 Receiver Module.....	43
TM3XREC1 Presentation .....	43
TM3XREC1 Characteristics .....	44
TM3XREC1 Wiring Diagram .....	45
Glossary .....	47
Index .....	49



# Safety Information

## Important Information

Read these instructions carefully, and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

### ⚠ DANGER

**DANGER** indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

### ⚠ WARNING

**WARNING** indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.

### ⚠ CAUTION

**CAUTION** indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.

### NOTICE

**NOTICE** is used to address practices not related to physical injury.

## Please Note

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction and operation of electrical equipment and its installation, and has received safety training to recognize and avoid the hazards involved.

## Qualification of Personnel

Only appropriately trained persons who are familiar with and understand the contents of this manual and all other pertinent product documentation are authorized to work on and with this product.

The qualified person must be able to detect possible hazards that may arise from parameterization, modifying parameter values and generally from mechanical, electrical, or electronic equipment. The qualified person must be familiar with the standards, provisions, and regulations for the prevention of industrial accidents, which they must observe when designing and implementing the system.

## Intended Use

The products described or affected by this document, together with software, accessories, and options, are expansion modules, intended for industrial use according to the instructions, directions, examples, and safety information contained in the present document and other supporting documentation.

The product may only be used in compliance with all applicable safety regulations and directives, the specified requirements, and the technical data.

Prior to using the product, you must perform a risk assessment in view of the planned application. Based on the results, the appropriate safety-related measures must be implemented.

Since the product is used as a component in an overall machine or process, you must ensure the safety of persons by means of the design of this overall system.

Operate the product only with the specified cables and accessories. Use only genuine accessories and spare parts.

Any use other than the use explicitly permitted is prohibited and can result in unanticipated hazards.

# About the Book

## Document Scope

This guide describes the hardware implementation of TM3 Transmitter and Receiver modules. It provides the part description, characteristics, wiring diagrams, and installation details for TM3 Transmitter and Receiver modules.

## Validity Note

This document has been updated for the release of EcoStruxure™ Machine Expert V2.2.

This document has been updated for the release of EcoStruxure™ Machine Expert - Basic V1.3.

For product compliance and environmental information (RoHS, REACH, PEP, EOLI, etc.), go to [www.se.com/ww/en/work/support/green-premium/](http://www.se.com/ww/en/work/support/green-premium/).

The characteristics of the products described in this document are intended to match the characteristics that are available on [www.se.com](http://www.se.com). As part of our corporate strategy for constant improvement, we may revise the content over time to enhance clarity and accuracy. If you see a difference between the characteristics in this document and the characteristics on [www.se.com](http://www.se.com), consider [www.se.com](http://www.se.com) to contain the latest information.

## Available Languages of this Document

This document is available in these languages:

- English (EIO0000003143)
- French (EIO0000003144)
- German (EIO0000003145)
- Spanish (EIO0000003146)
- Italian (EIO0000003147)
- Chinese (EIO0000003148)
- Portuguese (EIO0000003430)
- Turkish (EIO0000003431)

## Related Documents

Title of Documentation	Reference Number
Modicon TM3 Expansion Modules - Programming Guide (EcoStruxure Machine Expert - Basic)	EIO0000003345 (ENG) EIO0000003346 (FRE) EIO0000003347 (GER) EIO0000003348 (SPA) EIO0000003349 (ITA) EIO0000003350 (CHS) EIO0000003351 (POR) EIO0000003352 (TUR)
Modicon TM3 Modules - Programming Guide (EcoStruxure Machine Expert)	EIO0000003119 (ENG) EIO0000003120 (FRE) EIO0000003121 (GER) EIO0000003122 (SPA) EIO0000003123 (ITA) EIO0000003124 (CHS)
Modicon M221 Logic Controller - Hardware Guide	EIO0000003313 (ENG) EIO0000003314 (FRE) EIO0000003315 (GER) EIO0000003316 (SPA) EIO0000003317 (ITA) EIO0000003318 (CHS) EIO0000003319 (POR) EIO0000003320 (TUR)
Modicon M241 Logic Controller - Hardware Guide	EIO0000003083 (ENG) EIO0000003084 (FRE) EIO0000003085 (GER) EIO0000003086 (SPA) EIO0000003087 (ITA) EIO0000003088 (CHS)
Modicon M251 Logic Controller - Hardware Guide	EIO0000003101 (ENG) EIO0000003102 (FRE) EIO0000003103 (GER) EIO0000003104 (SPA) EIO0000003105 (ITA) EIO0000003106 (CHS)

Title of Documentation	Reference Number
Modicon M262 Logic/Motion Controller - Hardware Guide	EIO0000003659 (ENG) EIO0000003660 (FRA) EIO0000003661 (GER) EIO0000003662 (SPA) EIO0000003663 (ITA) EIO0000003664 (CHS) EIO0000003665 (POR) EIO0000003666 (TUR)
TM3 Transmitter and Receiver Modules - Instruction Sheet	HRB59607

To find documents online, visit the Schneider Electric download center ([www.se.com/ww/en/download/](http://www.se.com/ww/en/download/)).

## Product Related Information

<b>⚠⚠ DANGER</b>	
<b>HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH</b> <ul style="list-style-type: none"> <li>Disconnect all power from all equipment including connected devices prior to removing any covers or doors, or installing or removing any accessories, hardware, cables, or wires except under the specific conditions specified in the appropriate hardware guide for this equipment.</li> <li>Always use a properly rated voltage sensing device to confirm the power is off where and when indicated.</li> <li>Replace and secure all covers, accessories, hardware, cables, and wires and confirm that a proper ground connection exists before applying power to the unit.</li> <li>Use only the specified voltage when operating this equipment and any associated products.</li> </ul> <b>Failure to follow these instructions will result in death or serious injury.</b>	

<b>⚠ DANGER</b>	
<b>POTENTIAL FOR EXPLOSION</b> <ul style="list-style-type: none"> <li>Only use this equipment in non-hazardous locations, or in locations that comply with Class I, Division 2, Groups A, B, C and D.</li> <li>Do not substitute components which would impair compliance to Class I, Division 2.</li> <li>Do not connect or disconnect equipment unless power has been removed or the location is known to be non-hazardous.</li> <li>Do not use the USB port(s), if so equipped, unless the location is known to be non-hazardous.</li> </ul> <b>Failure to follow these instructions will result in death or serious injury.</b>	

**⚠ WARNING****LOSS OF CONTROL**

- Perform a Failure Mode and Effects Analysis (FMEA), or equivalent risk analysis, of your application, and apply preventive and detective controls before implementation.
- Provide a fallback state for undesired control events or sequences.
- Provide separate or redundant control paths wherever required.
- Supply appropriate parameters, particularly for limits.
- Review the implications of transmission delays and take actions to mitigate them.
- Review the implications of communication link interruptions and take actions to mitigate them.
- Provide independent paths for control functions (for example, emergency stop, over-limit conditions, and error conditions) according to your risk assessment, and applicable codes and regulations.
- Apply local accident prevention and safety regulations and guidelines.<sup>1</sup>
- Test each implementation of a system for proper operation before placing it into service.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

<sup>1</sup> For additional information, refer to NEMA ICS 1.1 (latest edition), *Safety Guidelines for the Application, Installation, and Maintenance of Solid State Control* and to NEMA ICS 7.1 (latest edition), *Safety Standards for Construction and Guide for Selection, Installation and Operation of Adjustable-Speed Drive Systems* or their equivalent governing your particular location.

**⚠ WARNING****UNINTENDED EQUIPMENT OPERATION**

- Only use software approved by Schneider Electric for use with this equipment.
- Update your application program every time you change the physical hardware configuration.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

## Information on Non-Inclusive or Insensitive Terminology

As a responsible, inclusive company, Schneider Electric is constantly updating its communications and products that contain non-inclusive or insensitive terminology. However, despite these efforts, our content may still contain terms that are deemed inappropriate by some customers.

## Terminology Derived from Standards

The technical terms, terminology, symbols and the corresponding descriptions in the information contained herein, or that appear in or on the products themselves, are generally derived from the terms or definitions of international standards.

In the area of functional safety systems, drives and general automation, this may include, but is not limited to, terms such as *safety*, *safety function*, *safe state*, *fault*, *fault reset*, *malfunction*, *failure*, *error*, *error message*, *dangerous*, etc.

Among others, these standards include:

Standard	Description
IEC 61131-2:2007	Programmable controllers, part 2: Equipment requirements and tests.
ISO 13849-1:2023	Safety of machinery: Safety related parts of control systems. General principles for design.
EN 61496-1:2020	Safety of machinery: Electro-sensitive protective equipment. Part 1: General requirements and tests.
ISO 12100:2010	Safety of machinery - General principles for design - Risk assessment and risk reduction
EN 60204-1:2006	Safety of machinery - Electrical equipment of machines - Part 1: General requirements
ISO 14119:2013	Safety of machinery - Interlocking devices associated with guards - Principles for design and selection
ISO 13850:2015	Safety of machinery - Emergency stop - Principles for design
IEC 62061:2021	Safety of machinery - Functional safety of safety-related electrical, electronic, and electronic programmable control systems
IEC 61508-1:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems: General requirements.
IEC 61508-2:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems: Requirements for electrical/electronic/programmable electronic safety-related systems.
IEC 61508-3:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems: Software requirements.
IEC 61784-3:2021	Industrial communication networks - Profiles - Part 3: Functional safety fieldbuses - General rules and profile definitions.
2006/42/EC	Machinery Directive
2014/30/EU	Electromagnetic Compatibility Directive
2014/35/EU	Low Voltage Directive

In addition, terms used in the present document may tangentially be used as they are derived from other standards such as:

Standard	Description
IEC 60034 series	Rotating electrical machines
IEC 61800 series	Adjustable speed electrical power drive systems
IEC 61158 series	Digital data communications for measurement and control – Fieldbus for use in industrial control systems

Finally, the term *zone of operation* may be used in conjunction with the description of specific hazards, and is defined as it is for a *hazard zone* or *danger zone* in the *Machinery Directive (2006/42/EC)* and *ISO 12100:2010*.

**NOTE:** The aforementioned standards may or may not apply to the specific products cited in the present documentation. For more information concerning the individual standards applicable to the products described herein, see the characteristics tables for those product references.



# TM3 Transmitter and Receiver Modules General Overview

## What's in This Part

TM3 Transmitter and Receiver Modules Description .....	14
TM3 Transmitter and Receiver Modules Installation .....	19

# TM3 Transmitter and Receiver Modules Description

## What's in This Chapter

General Description.....	14
Physical Description .....	16
Accessories .....	18

## General Description

### Introduction

The TM3 transmitter expansion module is equipped with:

- 1 front connector RJ45
- 1 screw for functional ground connection
- 2 status LEDs (link and power)

The TM3 receiver expansion module is equipped with:

- 1 front connector RJ45
- 1 connector for power supply
- 2 status LEDs (link and power)

The TM3 transmitter module is connected to the logic controller through the TM3 bus. It is connected using a connector at the left side of the module. The TM3 transmitter expansion module is the last physical module of the local configuration (there is no bus connector on the right-hand side of the module).

The TM3 receiver module is connected through the front connector RJ45 to the TM3 transmitter module with an appropriate cable (refer to [Accessories](#), page 18).


## TM3 Transmitter and Receiver Modules

The following table shows the TM3 transmitter and receiver expansion modules:

Reference	Description	Terminal Type / Pitch
TM3XTRA1, page 40	Data transmitter module for remote I/O	1 front connector RJ-45 1 screw for functional ground connection
TM3XREC1, page 43	Data receiver module for remote I/O	1 front connector RJ-45 Power supply connector / 5.08 mm

## Implementation of TM3 Transmitter and Receiver Modules


The following figure defines the system divided into a local configuration and remote configuration (M221 example):

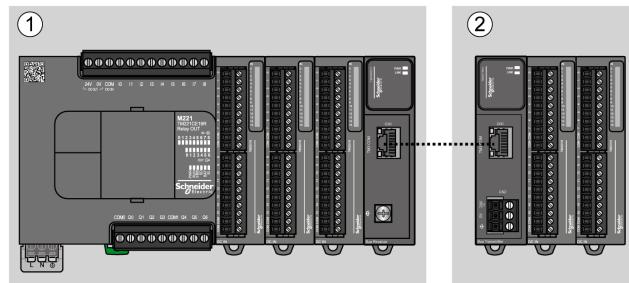

**1** Local configuration

**2** Remote configuration

The following figure represents the components of a remote configuration:

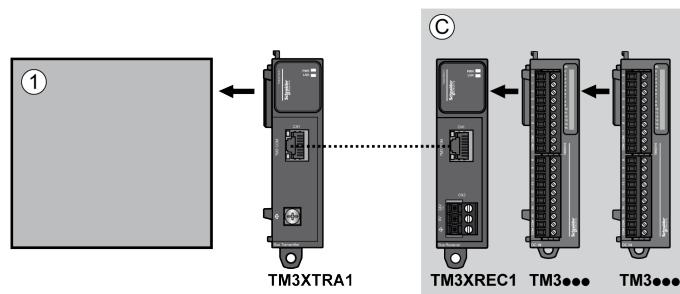

**1** Controller and modules

**C** Expansion modules (7 maximum)

**NOTE:** Transmitter and receiver modules does not count in the maximum number of expansion modules.

**NOTE:** You cannot use TM2 modules in configurations that include the TM3 transmitter and receiver modules.


# Physical Description

## Introduction

This section describes the physical characteristics of the TM3 transmitter and receiver modules.

## TM3 Transmitter Modules

The following figure shows the parts of the TM3XTRA1 transmitter expansion module:

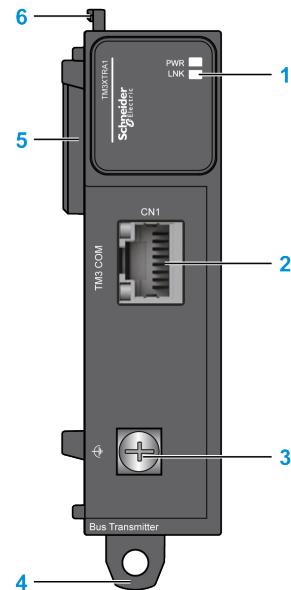


This table describes the main elements of the TM3XTRA1 transmitter expansion module shown above:

N°	Description	Refer to
1	LEDs for displaying the link activity and power supply status	–
2	TM3 bus port	–
3	Screw for functional ground connection	Grounding, page 34
4	Clip-on lock for 35 mm (1.38 in.) DIN rail	Top Hat Section Rail (DIN rail), page 25
5	Expansion connector for TM3 I/O bus (left side only)	–
6	Locking device for attachment to the previous module	–

**NOTE:** The transmitter must be the last module in the local I/O expansion configuration.

## TM3 Receiver Modules

The following figure shows the parts of the TM3XREC1 receiver expansion module:

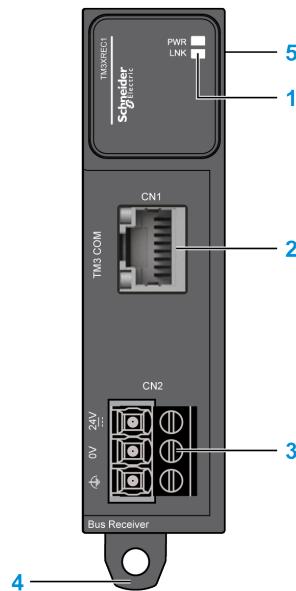

This table describes the main elements of the TM3XREC1 receiver expansion module shown above:

Nº	Description	Refer to
1	LEDs for displaying the link activity and power supply status	–
2	TM3 bus port	–
3	Power supply screw terminal block	Power Supply Wiring diagram, page 45
4	Clip-on lock for 35 mm (1.38 in.) DIN-rail	Top Hat Section Rail (DIN rail), page 25
5	Expansion connector for TM3 I/O bus (right side only)	–

# Accessories

## Overview

This section describes the accessories and cables.

## Accessories

Reference	Description	Use	Quantity
TMAT2PSET	Set of 5 removable screw terminal blocks	Connects the 24 Vdc power supply.	1
NSYTRAAB35	End brackets	Helps secure the logic controller or receiver module and their expansion modules on a top hat section rail (DIN rail).	
TMAM2	Mounting kit	Mounts the controller and I/O modules directly to a flat, vertical panel.	
TM200RSRCEMC	Shielding take-up clip	Mounts and connects the ground to the cable shielding.	25-pack

For top hat section rails (DIN rails), refer to Top Hat Section Rail (DIN rail), page 25.

## Cables

Reference	Description	Details	Length
ACTPC6FULS--WE	Actassi CL-MNC Patchcord RJ45 cable	Connects the transmitter to the receiver.	0.5, 1, 2, 3 or 5 m (1.64, 3.28, 6.56, 9.84 or 16.40 ft)
Provided with the TM3XTRA1 module	Functional ground cable	Connect the functional ground (FE) directly to the conductive backplane.	0.12 m (0.39 ft)

# TM3 Transmitter and Receiver Modules Installation

## What's in This Chapter

TM3 Transmitter and Receiver Modules General Rules for Implementing .....	19
TM3 Transmitter and Receiver Modules Installation .....	22
TM3 Transmitter and Receiver Modules Electrical Requirements .....	29

## TM3 Transmitter and Receiver Modules General Rules for Implementing

### Environmental Characteristics

#### Enclosure Requirements

TM3 expansion module components are designed as Zone B, Class A industrial equipment according to IEC/CISPR Publication 11. If they are used in environments other than those described in these standards, or in environments that do not meet the specifications in this manual the ability to meet electromagnetic compatibility requirements in the presence of conducted and/or radiated interference may be reduced.

All TM3 expansion module components meet European Community (CE) requirements for open equipment as defined by IEC/EN 61131-2. You must install them in an enclosure designed for the specific environmental conditions and to minimize the possibility of unintended contact with hazardous voltages. Use metal enclosures to improve the electromagnetic immunity of your TM3 expansion module components. Use enclosures with a keyed locking mechanism to minimize unauthorized access.

### Environmental Characteristics

All the TM3 expansion module components are electrically isolated between the internal electronic circuit and the input/output channels. This equipment meets CE requirements as indicated in the table below. This equipment is intended for use in a Pollution Degree 2 industrial environment.

#### **WARNING**

##### **UNINTENDED EQUIPMENT OPERATION**

Do not exceed any of the rated values specified in the environmental and electrical characteristics tables.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

The following table shows the general environmental characteristics:

Characteristic	Minimum Specification	Tested Range	
Standard compliance	IEC/EN 61131-2	–	
Ambient operating temperature	–	Horizontal installation	-10...55 °C (14...131 °F)
	–	Vertical installation	-10...35 °C (14...95 °F)
Storage temperature	–	-25...70 °C (-13...158 °F)	
Relative humidity	–	Transport and storage	10...95 % (non-condensing)
		Operation	10...95 % (non-condensing)
Degree of pollution	IEC/EN 60664-1	2	
Degree of protection	IEC/EN 61131-2	IP20	
Corrosion immunity	–	Atmosphere free from corrosive gases	
Operating altitude	–	0...2000 m (0...6560 ft)	
Storage altitude	–	0...3000 m (0...9843 ft)	
Vibration resistance	IEC/EN 61131-2	Panel mounting or mounted on a top hat section rail (DIN rail)	10 mm (0.39 in) fixed amplitude from 5...8.7 Hz 29.4 m/s <sup>2</sup> (96.45 ft/s <sup>2</sup> ) (3 g <sub>n</sub> ) fixed acceleration from 8.7...150 Hz
Mechanical shock resistance	–	147 m/s <sup>2</sup> or 482.28 ft/s <sup>2</sup> (15 g <sub>n</sub> ) for a duration of 11 ms	
<b>NOTE:</b> The tested ranges may indicate values beyond that of the IEC Standard. However, our internal standards define what is necessary for industrial environments. In all cases, we uphold the minimum specification if indicated.			

## Electromagnetic Susceptibility

The TM3 expansion module components meets electromagnetic susceptibility specifications as indicated in the following table:

Characteristic	Minimum Specification	Tested Range		
Electrostatic discharge	IEC/EN 61000-4-2	8 kV (air discharge) 6 kV (contact discharge)		
Radiated electromagnetic field	IEC/EN 61000-4-3	10 V/m (80...1000 MHz) 3 V/m (1.4...2 GHz) 1 V/m (2...2.7 GHz)		
Magnetic field	IEC/EN 61000-4-8	30 A/m 50 Hz, 60 Hz		
Fast transients burst	IEC/EN 61000-4-4	–	CM <sup>1</sup> and DM <sup>2</sup>	
		AC/DC Power lines	1 kV	
		Communication line	1 kV	
Surge immunity	IEC/EN 61000-4-5 IEC/EN 61131-2	–	CM <sup>1</sup>	DM <sup>2</sup>
		DC Power lines	1 kV	0.5 kV
		Shielded cable (between shield and ground)	1 kV	–
Induced electromagnetic field	IEC/EN 61000-4-6	10 Vrms (0.15...80 MHz)		
Conducted emission	IEC/EN 55011 (IEC/CISPR Publication 11)	AC power line: • 0.15...0.5 MHz: 79 dB $\mu$ V/m QP / 66 dB $\mu$ V/m AV • 0.5...300 MHz: 73 dB $\mu$ V/m QP / 60 dB $\mu$ V/m AV		
		AC/DC power line: • 10...150 kHz: 120...69 dB $\mu$ V/m QP • 150...1500 kHz: 79...63 dB $\mu$ V/m QP • 1.5...30 MHz: 63 dB $\mu$ V/m QP		
Radiated emission	IEC/EN 55011 (IEC/CISPR Publication 11)	Class A, 10 m distance: • 30...230 MHz: 40 dB $\mu$ V/m QP • 230...1000 MHz: 47 dB $\mu$ V/m QP		

**1** Common Mode  
**2** Differential Mode

**NOTE:** The tested ranges may indicate values beyond that of the IEC Standard. However, our internal standards define what is necessary for industrial environments. In all cases, we uphold the minimum specification if indicated.

## Certifications and Standards

### Introduction

For information on certifications and conformance to standards, go to [www.se.com](http://www.se.com).

For product compliance and environmental information (RoHS, REACH, PEP, EOLI, etc.), go to [www.se.com/green-premium](http://www.se.com/green-premium).

# TM3 Transmitter and Receiver Modules Installation

## Installation and Maintenance Requirements

### Before Starting

Read and understand this chapter before beginning the installation of your system.

The use and application of the information contained herein require expertise in the design and programming of automated control systems. Only you, the user, machine builder or integrator, can be aware of all the conditions and factors present during installation and setup, operation, and maintenance of the machine or process, and can therefore determine the automation and associated equipment and the related safeties and interlocks which can be effectively and properly used. When selecting automation and control equipment, and any other related equipment or software, for a particular application, you must also consider any applicable local, regional or national standards and/or regulations.

Pay particular attention in conforming to any safety information, different electrical requirements, and normative standards that would apply to your machine or process in the use of this equipment.

### Disconnecting Power

All options and modules should be assembled and installed before installing the control system on a mounting rail, onto a mounting plate or in a panel. Remove the control system from its mounting rail, mounting plate or panel before disassembling the equipment.

#### **DANGER**

##### **HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH**

- Disconnect all power from all equipment including connected devices prior to removing any covers or doors, or installing or removing any accessories, hardware, cables, or wires except under the specific conditions specified in the appropriate hardware guide for this equipment.
- Always use a properly rated voltage sensing device to confirm the power is off where and when indicated.
- Replace and secure all covers, accessories, hardware, cables, and wires and confirm that a proper ground connection exists before applying power to the unit.
- Use only the specified voltage when operating this equipment and any associated products.

**Failure to follow these instructions will result in death or serious injury.**

### Programming Considerations

#### **WARNING**

##### **UNINTENDED EQUIPMENT OPERATION**

- Only use software approved by Schneider Electric for use with this equipment.
- Update your application program every time you change the physical hardware configuration.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

## Operating Environment

In addition to the **Environmental Characteristics**, refer to **Product Related Information** in the beginning of the present document for important information regarding installation in hazardous locations for this specific equipment.

### **⚠ WARNING**

#### **UNINTENDED EQUIPMENT OPERATION**

Install and operate this equipment according to the conditions described in the Environmental Characteristics.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

## Installation Considerations

### **⚠ WARNING**

#### **UNINTENDED EQUIPMENT OPERATION**

- Use appropriate safety interlocks where personnel and/or equipment hazards exist.
- Install and operate this equipment in an enclosure appropriately rated for its intended environment and secured by a keyed or tooled locking mechanism.
- Use the sensor and actuator power supplies only for supplying power to the sensors or actuators connected to the module.
- Power line and output circuits must be wired and fused in compliance with local and national regulatory requirements for the rated current and voltage of the particular equipment.
- Do not use this equipment in safety-critical machine functions unless the equipment is otherwise designated as functional safety equipment and conforming to applicable regulations and standards.
- Do not disassemble, repair, or modify this equipment.
- Do not connect any wiring to reserved, unused connections, or to connections designated as No Connection (N.C.).

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

**NOTE:** JDYX2 or JDYX8 fuse types are cULus-recognized.

## Installation Guidelines

### Introduction

TM3 expansion modules are assembled by connecting them to a logic controller or receiver module.

The logic controller or receiver module and their expansion modules can be installed on a top hat section rail (DIN rail).

### Mounting Position and Minimum Clearances

The mounting position and minimum clearances of the expansion modules must conform with the rules defined for the appropriate hardware system. Refer to the *Installation chapter* in the *Controller Hardware* documentation for your specific controller.


**⚠ WARNING****UNINTENDED EQUIPMENT OPERATION**

- Place devices dissipating the most heat at the top of the cabinet and ensure adequate ventilation.
- Avoid placing this equipment next to or above devices that might cause overheating.
- Install the equipment in a location providing the minimum clearances from all adjacent structures and equipment as directed in this document.
- Install all equipment in accordance with the specifications in the related documentation.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**


## Correct Mounting Position

To obtain optimal operating characteristics, the TM3 Transmitter and Receiver Modules should be mounted horizontally on a vertical plane as shown in the figure below:

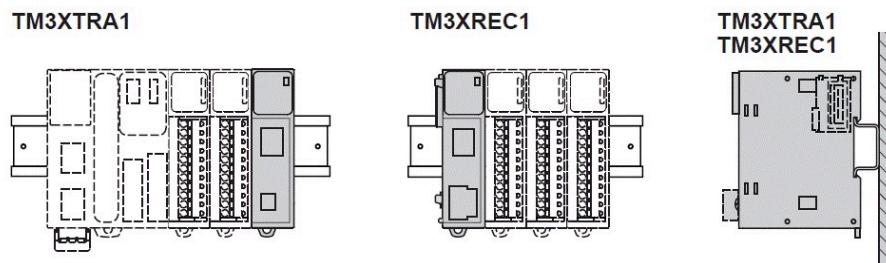


## Acceptable Mounting Position

The TM3 Transmitter and Receiver Modules can also be mounted vertically on a vertical plane as shown below:

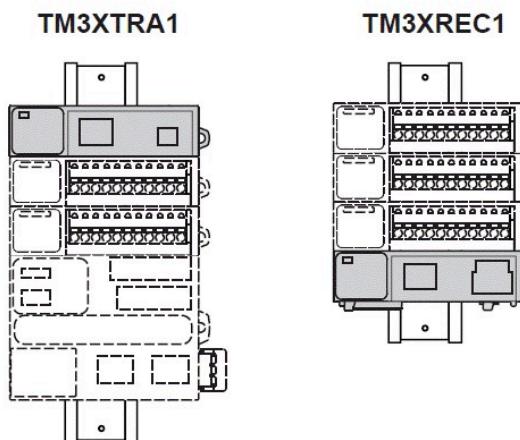

## Incorrect Mounting Positions

The TM3 Transmitter and Receiver Modules should only be positioned as shown in the Correct Mounting Position, page 24 figure. The figures below show the incorrect mounting positions:

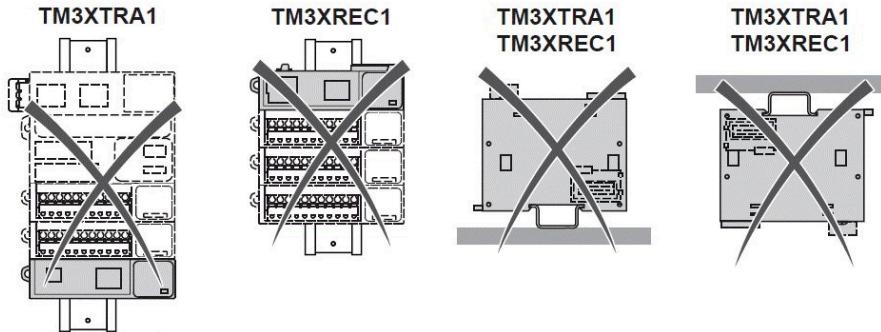


## Top Hat Section Rail (DIN rail)

### Dimensions of Top Hat Section Rail DIN Rail

You can mount the controller or receiver and their expansions on a 35 mm (1.38 in.) top hat section rail (DIN rail). The DIN rail can be attached to a smooth mounting surface or suspended from an EIA rack or mounted in a NEMA cabinet.


### Symmetric Top Hat Section Rails (DIN Rail)

The following illustration and table indicate the references of the top hat section rails (DIN rail) for the wall-mounting range:

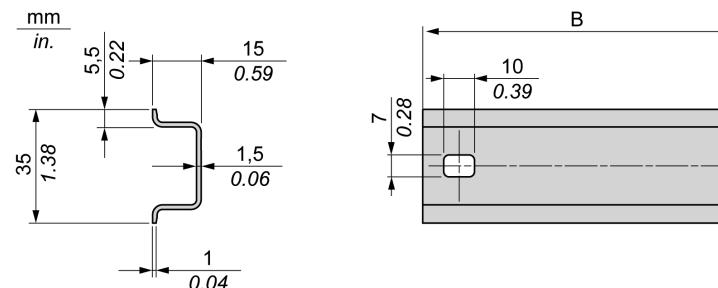

Reference	Type	Perforated	Rail Length (B)
NSYSDR50A	A	At each end	450 mm (17.71 in.)
NSYSDR60A	A	At each end	550 mm (21.65 in.)
NSYSDR80A	A	At each end	750 mm (29.52 in.)
NSYSDR100A	A	At each end	950 mm (37.40 in.)


The following illustration and table indicate the references of the symmetric top hat section rails (DIN rail) of 2000 mm (78.74 in.):

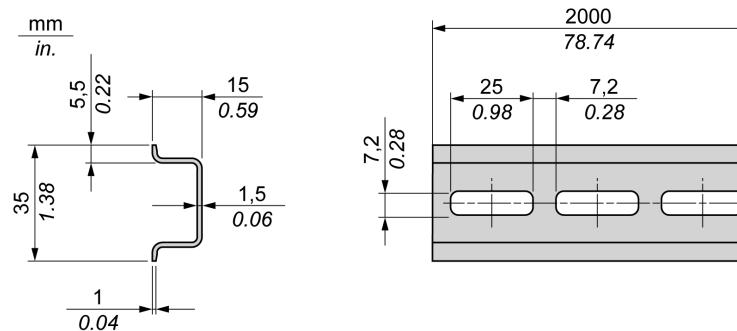

Reference	Type	Perforated	Rail Length
NSYSDR200	A	No	2000 mm (78.74 in.)
NSYSDR200D	A	Yes	

## Double-Profile Top Hat Section Rails (DIN rail)

The following illustration and table indicate the references of the double-profile top hat section rails (DIN rail) of 2000 mm (78.74 in.):

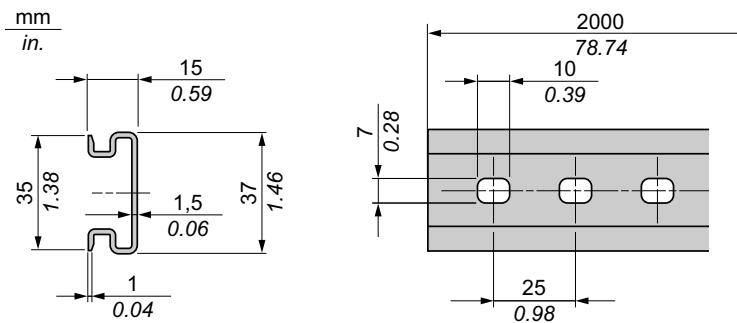

Reference	Type	Perforated	Rail Length
NSYDPR200	—	No	2000 mm (78.74 in.)
NSYDPR200D	—	Yes	

# Assembling a Module to a Controller or Receiver Module

## Introduction

This section describes how to assemble an expansion module to a controller, receiver module or other modules.

### ⚠️ DANGER

#### HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Disconnect all power from all equipment including connected devices prior to removing any covers or doors, or installing or removing any accessories, hardware, cables, or wires except under the specific conditions specified in the appropriate hardware guide for this equipment.
- Always use a properly rated voltage sensing device to confirm the power is off where and when indicated.
- Replace and secure all covers, accessories, hardware, cables, and wires and confirm that a proper ground connection exists before applying power to the unit.
- Use only the specified voltage when operating this equipment and any associated products.

**Failure to follow these instructions will result in death or serious injury.**

After connecting new modules to the controller, either directly or through a transmitter/receiver, update and redownload your application program before placing the system back in service. If you do not revise your application program to reflect the addition of new modules, I/O located on the expansion bus may no longer operate normally.

### ⚠️ WARNING

#### UNINTENDED EQUIPMENT OPERATION

- Only use software approved by Schneider Electric for use with this equipment.
- Update your application program every time you change the physical hardware configuration.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

## Assembling a Module to a Controller or Receiver Module

The following procedure shows how to assemble a controller or receiver module and a module together:

Step	Action
1	Remove all power and dismount any existing controller I/O assembly from its DIN mounting.
2	Remove the expansion connector sticker from the controller or the outermost installed expansion module.
3	Verify that the locking device, page 16 on the new module is in the upper position.
4	Align the internal bus connector on the left side of the module with the internal bus connector on the right side of the controller, receiver module or expansion module.
5	Press the new module towards the controller, receiver module or expansion module until it is securely in place.
6	Push down the locking device, page 16 on the top of the new module to lock it to the controller, receiver module or previously installed expansion module.

# Disassembling a Module from a Controller or Receiver Module

## Introduction

This section describes how to disassemble a module from a controller or receiver module.

### **DANGER**

#### **HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH**

- Disconnect all power from all equipment including connected devices prior to removing any covers or doors, or installing or removing any accessories, hardware, cables, or wires except under the specific conditions specified in the appropriate hardware guide for this equipment.
- Always use a properly rated voltage sensing device to confirm the power is off where and when indicated.
- Replace and secure all covers, accessories, hardware, cables, and wires and confirm that a proper ground connection exists before applying power to the unit.
- Use only the specified voltage when operating this equipment and any associated products.

**Failure to follow these instructions will result in death or serious injury.**

## Disassembling a Module from a Controller or Receiver Module

The following procedure describes how to disassemble a module from a controller or receiver module:

Step	Action
1	Remove all power from the control system.
2	Dismount the assembled controller and modules from the mounting rail.
3	Push up the locking device, page 16 from the bottom of the module to disengage it from the controller or the receiver module.
4	Pull apart the module from the controller or the receiver module.


## Direct Mounting on a Panel Surface

### Overview

This section shows how to install TM3 expansion module using the Panel Mounting Kit. This section also provides mounting hole layout for all modules.


### Installing the Panel Mounting Kit

The following procedure shows how to install a mounting strip:

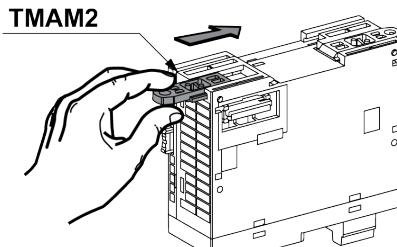Step	Action
1	<p>Insert the mounting strip TMAM2 into the slot at the top of the module.</p> 

### Mounting Hole Layout

The following diagram shows the mounting holes for TM3XTRA1 and TM3XREC1 expansion modules:

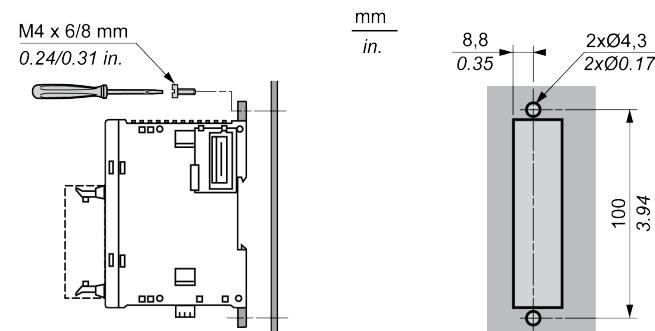

## TM3 Transmitter and Receiver Modules Electrical Requirements

### Wiring Best Practices

#### Overview

This section describes the wiring guidelines and associated best practices to be respected when using the TM3 system.

**DANGER****HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH**

- Disconnect all power from all equipment including connected devices prior to removing any covers or doors, or installing or removing any accessories, hardware, cables, or wires except under the specific conditions specified in the appropriate hardware guide for this equipment.
- Always use a properly rated voltage sensing device to confirm the power is off where and when indicated.
- Replace and secure all covers, accessories, hardware, cables, and wires and confirm that a proper ground connection exists before applying power to the unit.
- Use only the specified voltage when operating this equipment and any associated products.

**Failure to follow these instructions will result in death or serious injury.**

**WARNING****LOSS OF CONTROL**

- Perform a Failure Mode and Effects Analysis (FMEA), or equivalent risk analysis, of your application, and apply preventive and detective controls before implementation.
- Provide a fallback state for undesired control events or sequences.
- Provide separate or redundant control paths wherever required.
- Supply appropriate parameters, particularly for limits.
- Review the implications of transmission delays and take actions to mitigate them.
- Review the implications of communication link interruptions and take actions to mitigate them.
- Provide independent paths for control functions (for example, emergency stop, over-limit conditions, and error conditions) according to your risk assessment, and applicable codes and regulations.
- Apply local accident prevention and safety regulations and guidelines.<sup>1</sup>
- Test each implementation of a system for proper operation before placing it into service.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

<sup>1</sup> For additional information, refer to NEMA ICS 1.1 (latest edition), *Safety Guidelines for the Application, Installation, and Maintenance of Solid State Control* and to NEMA ICS 7.1 (latest edition), *Safety Standards for Construction and Guide for Selection, Installation and Operation of Adjustable-Speed Drive Systems* or their equivalent governing your particular location.

## Wiring Guidelines

The following rules must be applied when wiring a TM3 system:

- I/O and communication wiring must be kept separate from the power wiring. Route these 2 types of wiring in separate cable ducting.
- Verify that the operating conditions and environment are within the specification values.
- Use proper wire sizes to meet voltage and current requirements.
- Use copper conductors.
- Use twisted-pair, shielded cables for analog, and/or fast I/O.
- Use twisted-pair, shielded cables for networks, and field bus.

## **⚠ WARNING**

### **UNINTENDED EQUIPMENT OPERATION**

- Use shielded cables for all fast I/O, analog I/O, and communication signals.
- Ground cable shields for all fast I/O, analog I/O, and communication signals at a single point<sup>1</sup>.
- Route communications and I/O cables separately from power cables.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

<sup>1</sup>Multipoint grounding is permissible if connections are made to an equipotential ground plane dimensioned to help avoid cable shield damage in the event of power system short-circuit currents.

**NOTE:** Surface temperatures may exceed 60 °C (140 °F).

To conform to IEC 61010 standards, route primary wiring (wires connected to power mains) separately and apart from secondary wiring (extra low voltage wiring coming from intervening power sources). If that is not possible, double insulation is required such as conduit or cable gains.

## **Rules for Removable Screw Terminal Block**

The following tables show the cable types and wire sizes for a **3.81 pitch** removable screw terminal block (I/Os and power supply):

	—	—	—	—	—	—	—	—
mm <sup>2</sup>	0.14...1.5	0.14...1.5	0.25...1.5	0.25...0.5	2 x 0.14...0.5	2 x 0.14...0.75	2 x 0.25...0.34	2 x 0.5
AWG	26...16	26...16	22...16	22...20	2 x 26...20	2 x 26...20	2 x 24...22	2 x 20
Ø 2,5 mm (0.1 in.)		C c	N·m 0.28	lb-in 2.48				

The following tables show the cable types and wire sizes for a **5.08 pitch** removable screw terminal block (I/Os and power supply):

	—	—	—	—	—	—	—	—
mm <sup>2</sup>	0.2...2.5	0.2...2.5	0.25...2.5	0.25...2.5	2 x 0.2...1	2 x 0.2...1.5	2 x 0.25...1	2 x 0.5...1.5
AWG	24...14	24...14	23...14	23...14	2 x 24...17	2 x 24...16	2 x 23...17	2 x 20...16
Ø 3,5 mm (0.14 in.)		C c	N·m 0.49	lb-in 4.34				

The use of copper conductors is required.

## **⚠ DANGER**

### **FIRE HAZARD**

Use only the correct wire sizes for the maximum current capacity of the I/O channels and power supplies.

**Failure to follow these instructions will result in death or serious injury.**

## Rules for Removable Spring Terminal Block

The following tables show the cable types and wire sizes for a **3.81 pitch** removable spring terminal block (I/Os and power supply):

mm	9			
in.	0.35			
mm <sup>2</sup>	0.5...1.5	0.5...1.5	0.25...1.0	0.25...0.5
AWG	21...16	21...16	23...18	23...21

The following tables show the cable types and wire sizes for a **5.08 pitch** removable spring terminal block (I/Os and power supply):

mm	10			
in.	0.39			
mm <sup>2</sup>	0.2...2.5	0.2...2.5	0.25...2.5	0.25...2.5
AWG	24...14	24...14	23...14	23...14
				2 x 0.5...1
				2 x 20...17

The use of copper conductors is required.

### ⚠ DANGER

#### FIRE HAZARD

Use only the correct wire sizes for the maximum current capacity of the I/O channels and power supplies.

**Failure to follow these instructions will result in death or serious injury.**

The spring clamp connectors of the terminal block are designed for only one wire or one cable end. Two wires to the same connector must be installed with a double wire cable end to help prevent loosening.

### ⚠⚠ DANGER

#### LOOSE WIRING CAUSES ELECTRIC SHOCK

Do not insert more than one wire per connector of the spring terminal blocks unless using a double wire cable end (ferrule).

**Failure to follow these instructions will result in death or serious injury.**

## DC Power Supply Characteristics

### Overview

The TM3 transmitter and receiver modules require a power supply with a nominal voltage of 24 Vdc. The 24 Vdc power supply must be rated Protective Extra Low Voltage (PELV) according to IEC 61140. This power supply is isolated between the electrical input and output circuits of the power supply.

### ⚠ WARNING

#### POTENTIAL OF OVERHEATING AND FIRE

- Do not connect the equipment directly to line voltage.
- Use only isolating PELV power supplies and circuits to supply power to the equipment<sup>1</sup>.


**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

<sup>1</sup>For compliance to UL (Underwriters Laboratories) requirements, the power supply must also conform to the various criteria of NEC Class 2, and be inherently current limited to a maximum power output availability of less than 100 VA (approximately 4 A at nominal voltage), or not inherently limited but with an additional protection device such as a circuit breaker or fuse meeting the requirements of clause 9.4 Limited-energy circuit of UL 61010-1. In all cases, the current limit should never exceed that of the electric characteristics and wiring diagrams for the equipment described in the present documentation. In all cases, the power supply must be grounded, and you must separate Class 2 circuits from other circuits. If the indicated rating of the electrical characteristics or wiring diagrams are greater than the specified current limit, multiple Class 2 power supplies may be used.

## DC Power Supply Wiring Diagram

This section applies **only** to TM3XREC1 expansion modules. It is not valid for TM3XTRA1 expansion modules.

The following figure shows the wiring of the DC power supply:

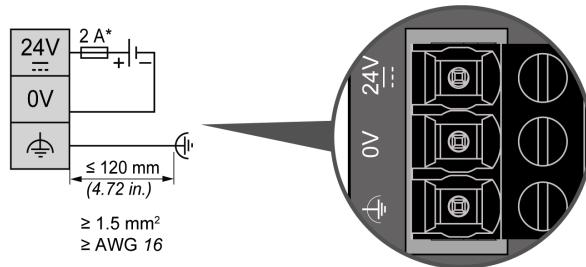

\* Type T fuse

The functional ground cable requires a cross-section of at least 1.5 mm<sup>2</sup> (AWG 16) and a maximum length of 120 mm (4.72 in.).

## DC Power Supply Rules

If 2 separate power supplies are used for the receiver and the controller, the TM3 receiver module power supply must be switched on before the controller power supply. If not, the TM3 bus does not start, and all modules are in Reset state (all outputs are forced to 0).

When the TM3 receiver module and the controller are supplied by the same power supply, the whole configuration starts together properly.

If only the TM3 receiver module is powered (controller not supplied), the TM3 modules after the TM3 receiver module are in Reset state (all outputs are forced to 0).

**NOTE:** You must connect the functional ground (FE) via the power supply, and the functional or protective ground of the power supply to the same equipotential functional ground of the controller and TM3 transmitter module. Without the functional ground connection, the TM3 transmitter module may not establish communication with the TM3 receiver module, or possibly damage your equipment.

**NOTICE****INOPERABLE EQUIPMENT**

- Ensure that the functional ground power supply connection of the TM3 receiver module is securely connected to the functional ground of the controller system.
- Monitor the status of the TM3 bus within your application to determine the correct behavior of TM3 bus in case of disconnection from the functional ground.

**Failure to follow these instructions can result in equipment damage.**

## Grounding the TM3 Transmitter and Receiver Modules

### Overview

Due to the effects of electromagnetic interference, cables carrying fast I/O, analog I/O, and the fieldbus communication signals must be shielded.

**⚠ WARNING****UNINTENDED EQUIPMENT OPERATION**

- Use shielded cables for all fast I/O, analog I/O, and communication signals.
- Ground cable shields for all fast I/O, analog I/O, and communication signals at a single point<sup>1</sup>.
- Route communications and I/O cables separately from power cables.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

<sup>1</sup>Multipoint grounding is permissible if connections are made to an equipotential ground plane dimensioned to help avoid cable shield damage in the event of power system short-circuit currents.

The use of shielded cables requires compliance with the following wiring rules:

- For protective earth ground connections (PE), metal conduit or ducting can be used for part of the shielding length, provided there is no break in the continuity of the ground connections. For functional earth ground (FE), the shielding is intended to attenuate electromagnetic interference and the shielding must be continuous for the length of the cable. If the purpose is both functional and protective, as is often the case for communication cables, the cable must have continuous shielding.
- Wherever possible, keep cables carrying one type of signal separate from the cables carrying other types of signals or power.

### Shielded Cables Connections

Cables carrying fast I/O, analog I/O, and the fieldbus communication signals must be shielded. The shielding must be securely connected to ground. Fast I/O and analog I/O shields may be connected either to the functional earth ground (FE) or to the protective earth ground (PE) of your TM3 expansion module. The fieldbus communication cable shields must be connected to the protective earth ground (PE) with a connecting clamp secured to the conductive backplane of your installation.

**⚠ WARNING****ACCIDENTAL DISCONNECTION FROM PROTECTIVE GROUND (PE)**

- Do not use the Grounding Bar to provide a protective earth ground (PE).
- Use the Grounding Bar only to provide a functional earth ground (FE).

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

## Protective Earth Ground (PE) on the Backplane

The protective earth ground (PE) is connected to the conductive backplane by a heavy-duty wire, usually a braided copper cable with the maximum allowable cable section.

## Functional Earth Ground (FE) on the DIN Rail

The DIN Rail for your TM3 system is common with the functional earth ground (FE) plane and must be mounted on a conductive backplane.



**⚠ WARNING****UNINTENDED EQUIPMENT OPERATION**

Connect the DIN rail to the functional earth ground (FE) of your installation.


**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

## Functional Earth Ground (FE) Connections

To connect the functional earth ground (FE):

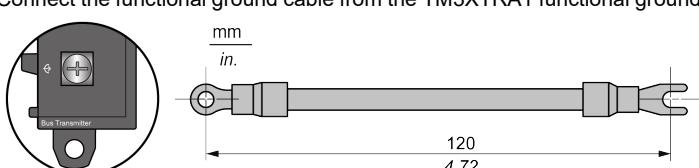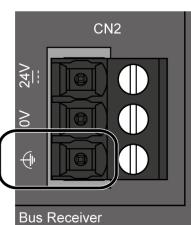
Step	Action				
1	<p>Connect the functional ground cable from the TM3XTRA1 functional ground screw to the conductive backplane.</p>  <p>The following table shows the characteristics of the screw to be used with the provided functional ground cable:</p> <table border="1"> <tr> <td></td> <td></td> <td>N·m lb-in</td> <td>0.5 4.4</td> </tr> </table> <p><b>NOTE:</b> You must connect the functional ground (FE) of the TM3 transmitter module to the same functional ground connected to your controller. Without the functional ground connection, the TM3 transmitter module may not establish communication with the TM3 receiver module.</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p><b>WARNING</b></p> <p><b>UNINTENDED EQUIPMENT OPERATION</b></p> <ul style="list-style-type: none"> <li>Ensure that the functional ground cable is securely connected between the functional ground screw of the TM3 transmitter module and the functional ground of the controller.</li> <li>Monitor the status of the TM3 bus within your application to determine the correct behavior of the TM3 bus in case of disconnection from the functional ground of the TM3 transmitter module.</li> </ul> <p><b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b></p> </div> <p>Applying torque above the limit may damage the terminal screw or threads.</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p><b>NOTICE</b></p> <p><b>INOPERABLE EQUIPMENT</b></p> <p>Do not tighten screw terminals beyond the specified maximum torque (N·m / lb-in.).</p> <p><b>Failure to follow these instructions can result in equipment damage.</b></p> </div> <p>2 Connect the functional ground of the TM3XREC1 power supply connector to the conductive backplane. The functional ground cable requires a cross-section of at least 1.5 mm<sup>2</sup> (AWG 16) and a maximum length of 120 mm (4.72 in.).</p> 			N·m lb-in	0.5 4.4
		N·m lb-in	0.5 4.4		

This figure presents grounding with a common ground plane:

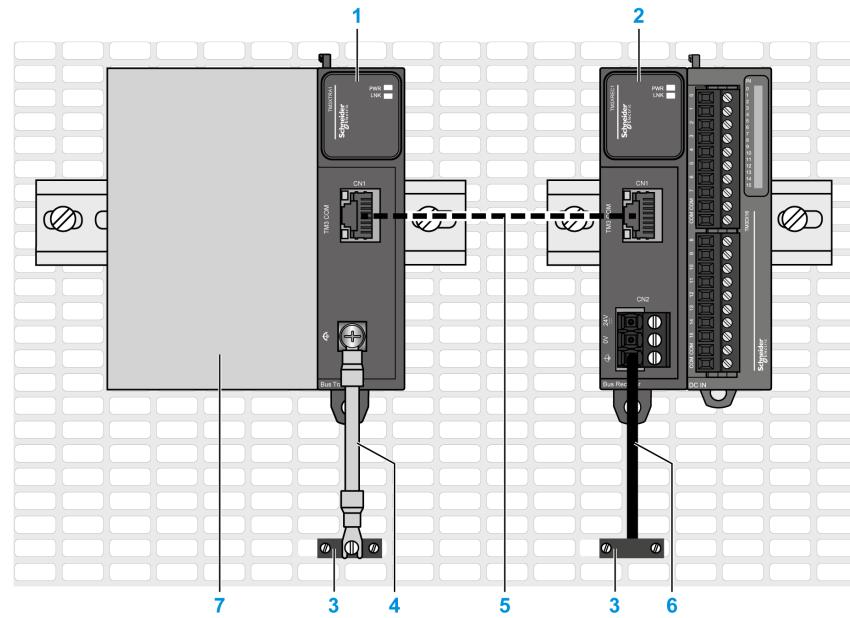

- (1) TM3XTRA1
- (2) TM3XREC1
- (3) Functional earth ground (FE)
- (4) Provided functional ground cable
- (5) ACTPC6FULS•WE cable
- (6) User-supplied grounding cable
- (7) A controller, bus coupler or expansion module

This figure presents grounding with separated ground planes:

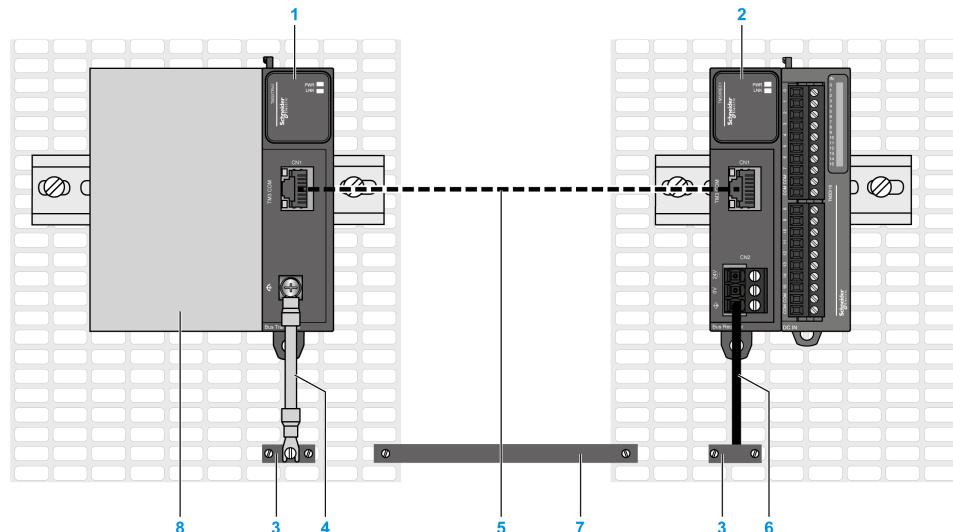

- (1)** TM3XTRA1
- (2)** TM3XREC1
- (3)** Functional earth ground (FE)
- (4)** Provided functional ground cable
- (5)** ACTPC6FULS•WE cable
- (6)** User-supplied grounding cable
- (7)** Equipotential ground connection
- (8)** A controller, bus coupler or expansion module

# TM3 Transmitter and Receiver Modules

## What's in This Part

TM3XTRA1 Transmitter Module .....	40
TM3XREC1 Receiver Module .....	43

# TM3XTRA1 Transmitter Module

## What's in This Chapter

TM3XTRA1 Presentation .....	40
TM3XTRA1 Characteristics .....	41
TM3XTRA1 Wiring Diagram .....	41

## Overview

This chapter describes the TM3XTRA1 expansion module, its characteristics, and its connection to the different sensors.

## TM3XTRA1 Presentation

### Overview

TM3XTRA1 transmitter module:

- One RJ45 connector for communication
- Screw for functional ground connection

## Main Characteristics

Characteristics	Value
Function	Associated with the receiver forms the remote I/O expansion.
Connector type	RJ45
Communication type	RS485
Current draw on 5 Vdc internal bus	160 mA maximum
Current draw on 24 Vdc internal bus	—
Cable type and length	For more information, refer to Accessories, page 18.
Weight	65 g (2.29 oz)

## Status LEDs

The following figure shows the status LEDs:



This table describes the status LEDs:

LED	Color	Status	Description
Power (PWR)	Green	On	Power supply from TM3 bus is available.
		Off	Power supply from TM3 bus is not available.
Link (LNK)	Green	On	Link/data signal is detected from the receiver.
		Off	No link/data signal is detected from the receiver.

## TM3XTRA1 Characteristics

### Introduction


This section provides a description of the characteristics of the TM3XTRA1 expansion module.

See also Environmental Characteristics, page 19.

<b>⚠ WARNING</b>	
<b>UNINTENDED EQUIPMENT OPERATION</b>	
Do not exceed any of the rated values specified in the environmental and electrical characteristics tables.	
<b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b>	

### Dimensions

The following diagrams show the dimensions for the TM3XTRA1 expansion module:

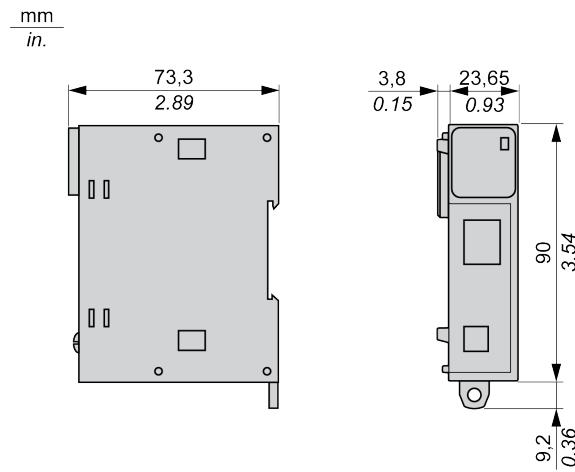


## TM3XTRA1 Wiring Diagram

### Wiring Rules

See Wiring Best Practices, page 29.

## TM3 Bus Port

The TM3XTRA1 is equipped with an RJ45 connector.

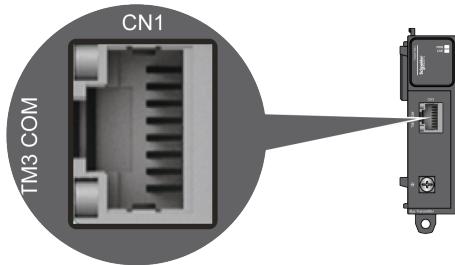

# TM3XREC1 Receiver Module

## What's in This Chapter

TM3XREC1 Presentation .....	43
TM3XREC1 Characteristics .....	44
TM3XREC1 Wiring Diagram.....	45

## Overview

This chapter describes the TM3XREC1 expansion module, its characteristics, and its connection to the different sensors.

## TM3XREC1 Presentation

### Overview

TM3XREC1 receiver module:

- One RJ45 connector for communication
- Removable 24 Vdc power supply terminal block

## Main Characteristics

Characteristics	Value	
Function	Associated with the transmitter forms the remote I/O expansion.	
Connector type	RJ45	
Communication type	RS485	
Power dissipation	1 W maximum	
Receiver module	Current draw on 24 Vdc power supply for the receiver module	40 mA
	The current consumption on 24 Vdc power supply for the internal bus	1 A maximum (with the maximum number of TM3 expansion modules).
Power supplied available for connected inputs and outputs modules	Current draw on 5 Vdc internal bus	560 mA maximum
	Current draw on 24 Vdc internal bus	560 mA maximum
Cable type and length	For more information, refer to Accessories, page 18.	
Weight	75 g (2.64 oz)	

## Status LEDs

The following figure shows the status LEDs:



This table describes the status LEDs:

LED	Color	Status	Description
Power (PWR)	Green	On	Power supply for TM3 bus is available.
		Off	Power supply for TM3 bus is not available.
Link (LNK)	Green	On	Link/data signal is detected from the transmitter.
		Off	No link/data signal is detected from the transmitter.

## TM3XREC1 Characteristics

### Introduction

This section provides a description of the characteristics of the TM3XREC1 module.

See also Environmental Characteristics, page 19.

#### **! DANGER**

##### **FIRE HAZARD**

Use only the correct wire sizes for the maximum current capacity of the I/O channels and power supplies.

**Failure to follow these instructions will result in death or serious injury.**

#### **! WARNING**


##### **UNINTENDED EQUIPMENT OPERATION**

Do not exceed any of the rated values specified in the environmental and electrical characteristics tables.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

## Dimensions

The following diagrams show the dimensions for the TM3XREC1 expansion module:

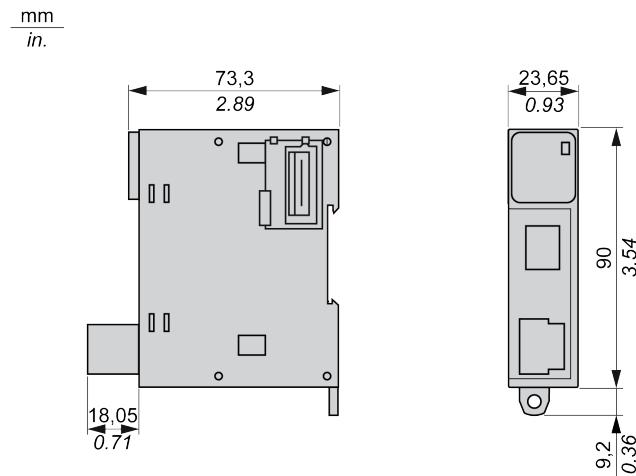


## TM3XREC1 Wiring Diagram

### Wiring Rules

See Wiring Best Practices, page 29.

### TM3 Bus Port

The TM3XREC1 is equipped with an RJ45 connector.

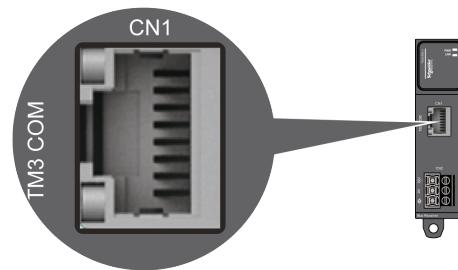

## DC Power Supply Wiring Diagram

See DC Power Supply Characteristics, page 32.



# Glossary

## A

**application:**

A program including configuration data, symbols, and documentation.

## C

**controller:**

Automates industrial processes (also known as programmable logic controller or programmable controller).

## E

**EIA rack:**

(*electronic industries alliance rack*) A standardized (EIA 310-D, IEC 60297, and DIN 41494 SC48D) system for mounting various electronic modules in a stack or rack that is 19 inches (482.6 mm) wide.

**EN:**

EN identifies one of many European standards maintained by CEN (*European Committee for Standardization*), CENELEC (*European Committee for Electrotechnical Standardization*), or ETSI (*European Telecommunications Standards Institute*).

**expansion bus:**

An electronic communication bus between expansion I/O modules and a controller or bus coupler.

**expansion connector:**

A connector to attach expansion I/O modules.

## H

**HE10:**

Rectangular connector for electrical signals with frequencies below 3 MHz, complying with IEC 60807-2.

## I

**IEC:**

(*international electrotechnical commission*) A non-profit and non-governmental international standards organization that prepares and publishes international standards for electrical, electronic, and related technologies.

**I/O:**

(*input/output*)

**IP 20:**

(*ingress protection*) The protection classification according to IEC 60529 offered by an enclosure, shown by the letter IP and 2 digits. The first digit indicates 2 factors: helping protect persons and for equipment. The second digit indicates helping protect against water. IP 20 devices help protect against electric contact of objects larger than 12.5 mm, but not against water.

## N

### **NEMA:**

*(national electrical manufacturers association)* The standard for the performance of various classes of electrical enclosures. The NEMA standards cover corrosion resistance, ability to help protect from rain, submersion, and so on. For IEC member countries, the IEC 60529 standard classifies the ingress protection rating for enclosures.

## P

### **PE:**

*(Protective Earth)* A common grounding connection to help avoid the hazard of electric shock by keeping any exposed conductive surface of a device at earth potential. To avoid possible voltage drop, no current is allowed to flow in this conductor (also referred to as *protective ground* in North America or as an equipment grounding conductor in the US national electrical code).

### **program:**

The component of an application that consists of compiled source code capable of being installed in the memory of a logic controller.

## R

### **RJ45:**

A standard type of 8-pin connector for network cables defined for Ethernet.

## T

### **terminal block:**

*(terminal block)* The component that mounts in an electronic module and provides electrical connections between the controller and the field devices.

# Index

## A

accessories .....	18
assembling to a controller .....	27

## C

certifications and standards.....	21
characteristics	
TM3XREC1 .....	44
TM3XTRA1 .....	41
controllers	
disassembling a module .....	28

## D

description	
transmitter and receiver .....	14
DIN rail .....	25

## E

electromagnetic susceptibility.....	21
environmental characteristics .....	19

## G

grounding .....	34
-----------------	----

## I

intended use .....	6
--------------------	---

## M

minimum clearances.....	23
mounting position .....	23

## P

physical description	
TM3 expansion modules.....	16
presentation	
TM3XREC1 .....	43
TM3XTRA1 .....	40

## Q

qualification of personnel .....	5
----------------------------------	---

## T

TM3 expansion modules	
physical description.....	16
TM3XREC1	
characteristics .....	44
presentation .....	43
wiring diagram .....	45
TM3XREC1 receiver module.....	43
TM3XTRA1	
characteristics .....	41

presentation .....	40
wiring diagram .....	41
TM3XTRA1 transmitter module .....	40

## W

wiring diagram	
TM3XREC1 .....	45
TM3XTRA1 .....	41
wiring rules .....	29

**Schneider Electric**  
35 rue Joseph Monier  
92500 Rueil Malmaison  
France

+ 33 (0) 1 41 29 70 00

[www.se.com](http://www.se.com)

As standards, specifications, and design change from time to time,  
please ask for confirmation of the information given in this publication.

© 2024 Schneider Electric. All rights reserved.

EIO0000003143.02