

# Essentia Intelligent DIN-Rail Switch Monitor EME214-I

Instruction Sheet  
R10124GB3



**Schneider Electric**

[www.se.com/buildings](http://www.se.com/buildings)

R10124GB3  
October 2023

© 2020-2023 – Schneider Electric. All Rights Reserved. This information is only to be used as guidance. Subject to changes and errors.

## Contents

<b>Safety Information .....</b>	<b>4</b>
<b>Related Information .....</b>	<b>4</b>
<b>1   Essentia Intelligent DIN-rail Switch Monitor EME214-I .....</b>	<b>4</b>
1.1   Status indications .....	4
1.2   Dimensions .....	5
1.3   Essentia intelligent DIN-rail switch monitor standard resistive monitoring mode connectivity diagram .....	5

## Safety Information

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction, installation, and operation of electrical equipment and has received safety training to recognize and avoid the hazards involved.

## Related Information

For technical specifications, please refer to the Product Datasheet for FFS06720314 on [se.com](http://se.com).


# 1 Essentia Intelligent DIN-rail Switch Monitor EME214-I

The Essentia intelligent DIN-rail switch monitor EME214-I (FFS06720314 and FFS06720314SA) with isolator provides supervision of normally open contacts connected to a single pair of cables. It has selectable status reporting delay making it suitable for monitoring flow switches. There is a DIL switch for address setting. Address range is 1-126.

## 1.1 Status indications

Legend	LED Status	Description
Poll/ISOL	Flashing Green	Polling LED
Poll/ISOL	Continuous Yellow	Isolator LED
I/P	Continuous Yellow	Input Fault
I/P	Continuous Red	Input Active

## 1.2 Dimensions

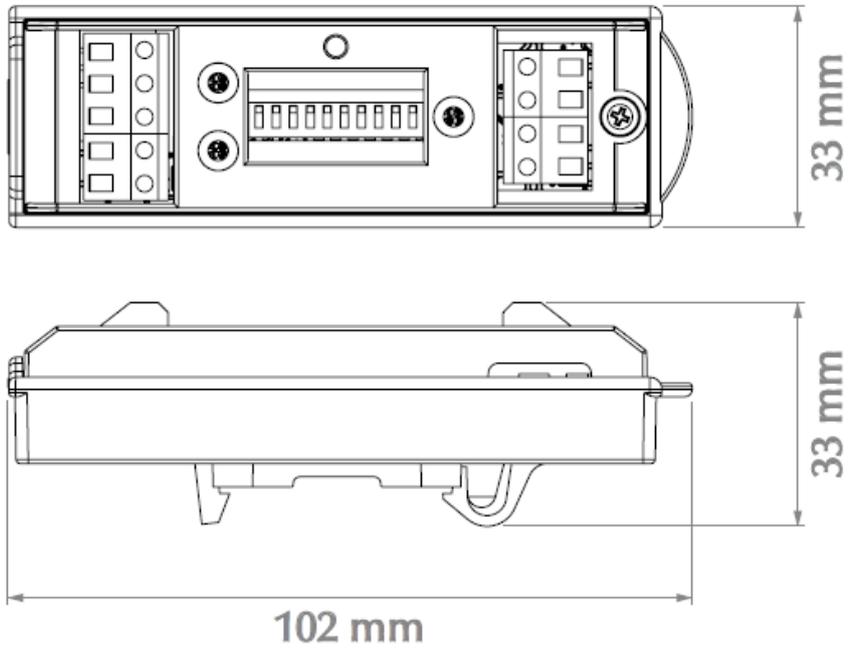

## 1.3 Essentia intelligent DIN-rail switch monitor standard resistive monitoring mode connectivity diagram

