


Instruction Leaflet 06/25 IL034119ZU

© 2023 Eaton Industries GmbH
Eaton.com/documentation
Eaton.com/after-sales


Eaton.com/recycling



DILA(-PI)
DILM7...DILM15(-PI)
DILMP20(-PI)
DILM32-XHI...(-PI)
DILA-XHI...(-PI)
DILA-XHI...-S(-PI)
XTCE(PI)...B
XTCE(PI)...B
XTRE(PI)
XTCEXF...(-PI)
XTCEXFA...(-PI)
XTCEXSAB(PI)...

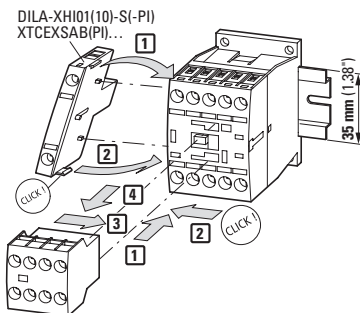

PZ2
1.2 Nm
(10.6 lb-in)

 

DILM...XTCE...
DILA...XTRE...
DIL...XHI...
XTCEX...



1x (0.75 - 6 mm²)
2x (0.75 - 2.5 mm²)
1x (0.75 - 2.5 mm²)
2x (0.75 - 2.5 mm²)

AWG
18-14


EU: Eaton Industries GmbH, Hein-Moeller-Straße 7-11, 53115 Bonn, Germany
UK: Eaton Electric Ltd., P.O. Box 554, Abbey Park, Southampton Road, Titchfield, PO14 4DA, UK
أون إلكترونيك تقسيم انباله شارع سقراط، معارف امتداد حادق، الدار البيضاء 20700

Mounting


- 1 place in position
- 2 latch in
- 3 slide
- 4 remove

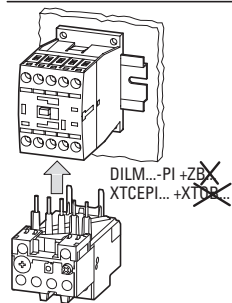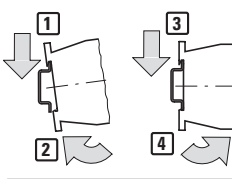

DILM7...DILM15(-PI) DILMP20(-PI) XTCE(PI)...B XTCFPI020B

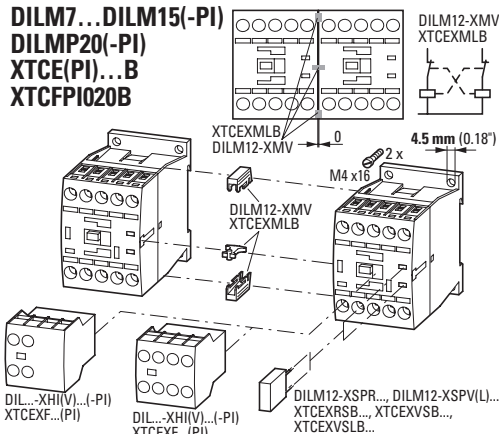

DANGER The opening of the branch-circuit protective device may be an indication that a fault has been interrupted. To reduce the risk of fire or electrical shock, current-carrying parts and other components of the controller should be examined and replaced if damaged. If burnout of the element of an overload relay occurs, the complete overload relay must be replaced.

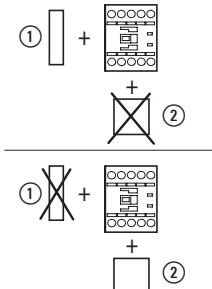

- 1 DILA-XHI...-S(-PI), XTCEXSAB(PI)...
- 2 DILM12-XHI...-PI, DILM32-XHI...(-PI), DILA-XHI...(-PI), XTCEXFAC...(-PI), XTCEXFCLC...(-PI), XTCEXFCC...(-PI)

~~DILA-22 (...VDC) XTRE10B22...D~~
~~+ DILA-XHI(V)04 + XTCEXFAC04~~
~~(13, 22, 31, 40) (13, 22, 31, 40)~~
~~+ DILA-XHI01 + XTCEXFAC01~~

DILA...-PI, DILM7-15-PI, DILMP20-PI, DIL...XHI-PI XTREPI, XTCEPI...B, XTCEFI...B, XT(C)(R)EX...(-PI)

	0.5 - 2.5 mm ²	AWG20 - 12	2
	0.5 - 2.5 mm ²	AWG20 - 14	1 2 3
	0.5 - 2.5 mm ² → DIN46228-1		2
	1 x (0.5 - 2.5 mm ²) → DIN46228-4		
	2 x (0.5 - 1.5 mm ²) → DIN46228-4		

